

## Step-by-step instructions on configuring your computer speakers.

## The Axiom Warranty

All our speaker models; towers, bookshelves, surrounds, centers, subwoofers and all our amplifiers; subwoofer and multichannel amplifiers are warrantied against manufacturer's defects for 5 years.

AXIOM CANADA INC. warrants this audio loudspeaker system (the "Product") to be free from original manufacturing defects in materials and workmanship for five years from date of purchase from an authorized Axiom dealer. This warranty extends only to the original consumer purchaser. AXIOM CANADA INC. does not warrant goods used in commercial or industrial applications. This warranty does not cover any expenses incurred in any removal or re-installation of the product.

If the product should prove so defective within the warranty period, return the product by prepaid delivery to AXIOM CANADA INC., along with the original sales invoice or other proof of purchase, which establishes eligibility for warranty service. AXIOM CANADA INC. will, at its option, replace or repair the product free of charge and return the product by prepaid delivery. This warranty does not apply to any product, which has been damaged, misused, altered or repaired by anyone other than an AXIOM CANADA INC. authorized service facility.

Any implied warranties including fitness for use and merchantability are limited in duration to the period of the express warranties set forth above, and no person is authorized to assume for Axiom Canada Inc. any other liability in connection with the sale of the product. Axiom Canada Inc. expressly disclaims liability for any incidental and consequential damages caused by the product. The remedies provided under this warranty are exclusive and in lieu of all others.

This warranty gives specific legal rights. In addition, there may be other legal rights arising from the sale of the product, which vary from province to province or state to state. Some provinces / states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply in some areas.



## Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
17. The main plug of the power supply cord shall remain readily operable.
18. Do not expose batteries to excessive heat such as sunshine, fire or the like.



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING : To reduce the risk of fire or electric shock , do not expose this apparatus to rain or moisture.**

### SAFETY PROCEDURES

- Ensure that you connect your speakers only to the type of power supply indicated on the amplifier faceplate, and ensure that the power cord cannot be walked on or otherwise damaged.
- To prevent electric shock, match wide blade of plug to wide slot, fully insert.
- Ensure that objects or liquids are not allowed to penetrate the enclosure.
- Your AXIOM speakers are finished in a durable vinyl and from time to time should be wiped clean gently with a slightly damp cloth to remove any dust or stains.

For any additional information or service, contact:

AXIOM, 2885 HWY 60  
DWIGHT ON CANADA  
P01 1H0

Phone: 1-866-244-8796

## Audiobyte Computer Speakers

### Step 1:

Voltage is factory-set to 115 volts. This is the standard setting for the United States, Canada and Japan. If you are in a 220-volt, 230-volt or 240-volt country then set this switch to 230 volts. **WARNING: Do not plug into a 220-volt or 230-volt socket with this switch set to 115 volts.**

### Step 2:

Using the supplied 3.5mm cable with one yellow end and one green end, plug the yellow end into the input with the yellow circle on your Audiobyte amplifier. Plug the green end into the green output on your computer.

### Step 3:

Using one of the supplied 3.5mm cables with a black end at each end, plug one end into the output marked "Right" on your Audiobyte amplifier and plug the other end into the right speaker.

### Step 4:


Using the other supplied 3.5mm cable with a black end at each end, plug one end into the output marked "Left" on your Audiobyte amplifier and plug the other end into the left speaker.

### Step 5:

If you purchased an Axiom EPZero subwoofer then using the dual purple-ended cable supplied with your EPZero, plug one end into the purple output marked "Sub" on your Audiobyte amplifier and the other end into the rear of your EPZero sub-woofer.

### Step 6:

If you are using a self-powered subwoofer like the Axiom EP125 or EP400 then use an RCA cable to connect the input of the subwoofer to this purple RCA jack on your Audiobyte amplifier.

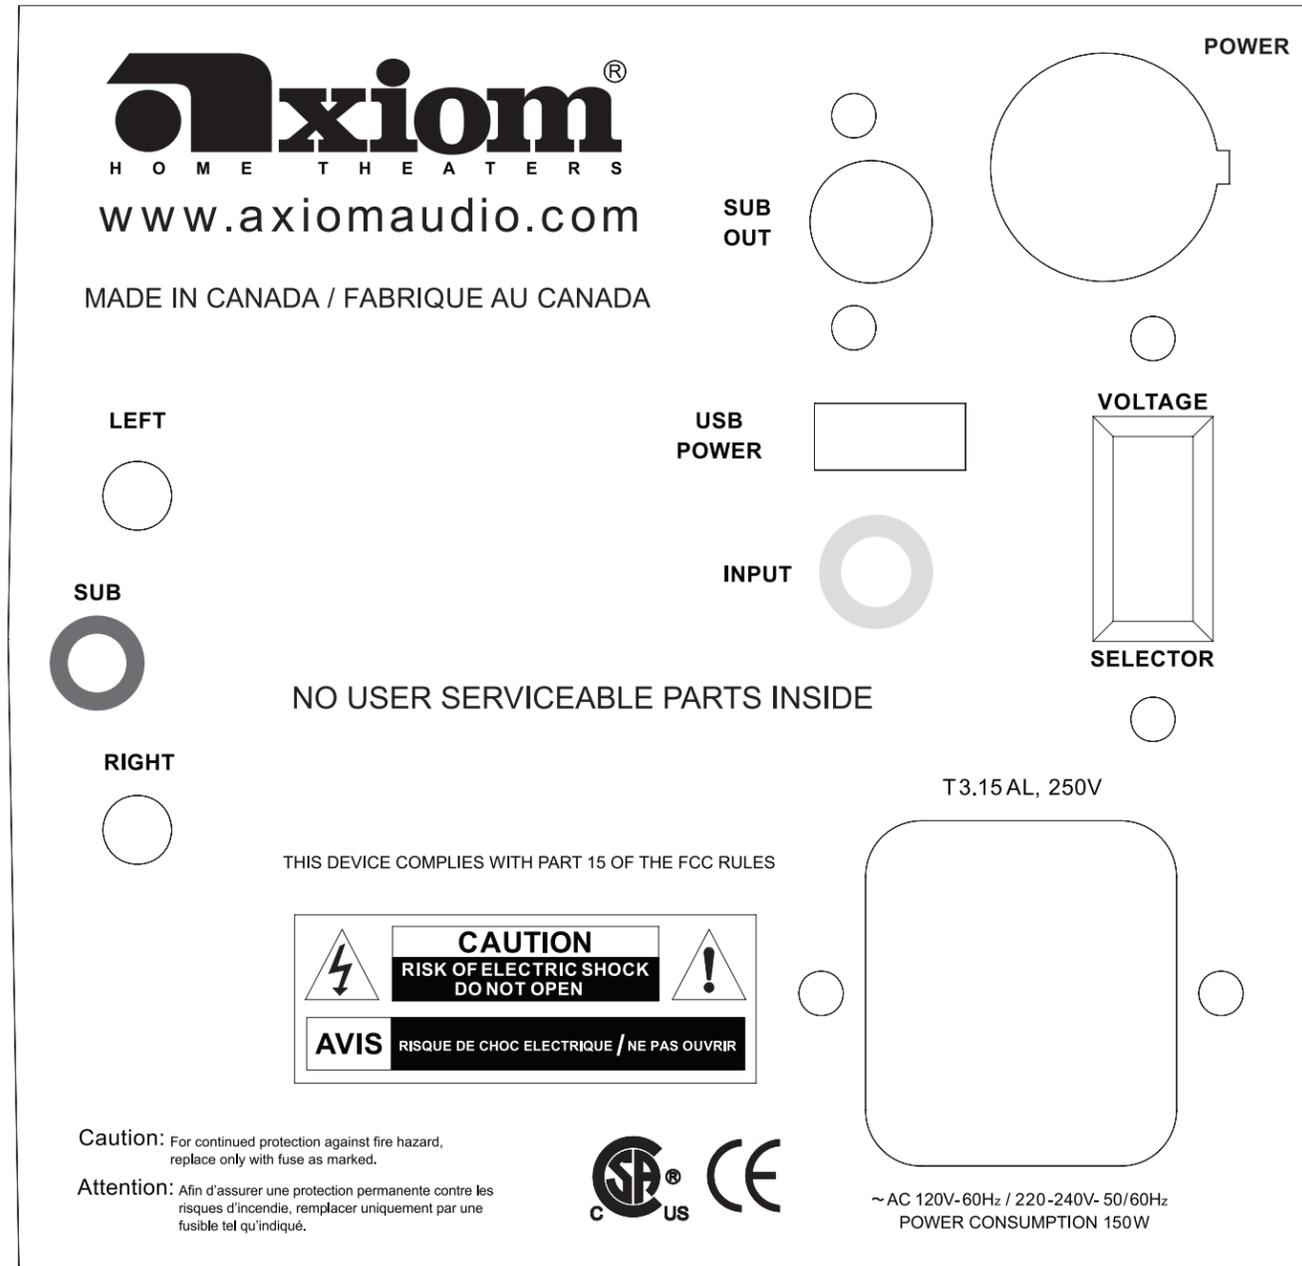

### Step 7:

If you are hooking up an external iPod dock then use a USB cable to go from the dock to the USB output on your Audiobyte amplifier. This will charge the battery in your iPod.

**NOTE:** To use an external iPod dock or to plug in directly from your iPod or MP3 player, you will need to run a 3.5 mm cable either from the iPod itself, the iPod dock or the MP3 player to the yellow input from Step 1.

### Step 8:

First turn down the volume using the volume knob on the front of your Audiobyte amplifier. Then plug the appropriate AC cable to suit your wall socket to the 3-pin input connector on your Audiobyte amplifier. A standard cable used in North America is supplied.

### Step 9:

Turn on your Audiobyte amplifier and set the volume knob on the front to the desired setting.