

The Axiom Warranty

All our speaker models; towers, bookshelves, surrounds, centers, subwoofers and all our amplifiers; subwoofer and multichannel amplifiers are warrantied against manufacturer's defects for 5 years.

AXIOM CANADA INC. warrants this audio loudspeaker system (the "Product") to be free from original manufacturing defects in materials and workmanship for five years from date of purchase from an authorized Axiom dealer. This warranty extends only to the original consumer purchaser. AXIOM CANADA INC. does not warrant goods used in commercial or industrial applications. This warranty does not cover any expenses incurred in any removal or re-installation of the product.

If the product should prove so defective within the warranty period, return the product by prepaid delivery to AXIOM CANADA INC., along with the original sales invoice or other proof of purchase, which establishes eligibility for warranty service. AXIOM CANADA INC. will, at its option, replace or repair the product free of charge and return the product by prepaid delivery. This warranty does not apply to any product, which has been damaged, misused, altered or repaired by anyone other than an AXIOM CANADA INC. authorized service facility.


Any implied warranties including fitness for use and merchantability are limited in duration to the period of the express warranties set forth above, and no person is authorized to assume for Axiom Canada Inc. any other liability in connection with the sale of the product. Axiom Canada Inc. expressly disclaims liability for any incidental and consequential damages caused by the product. The remedies provided under this warranty are exclusive and in lieu of all others.

This warranty gives specific legal rights. In addition, there may be other legal rights arising from the sale of the product, which vary from province to province or state to state. Some provinces / states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply in some areas.



Step-by-step instructions on configuring your on-wall speakers.

Location: / Positionnement:

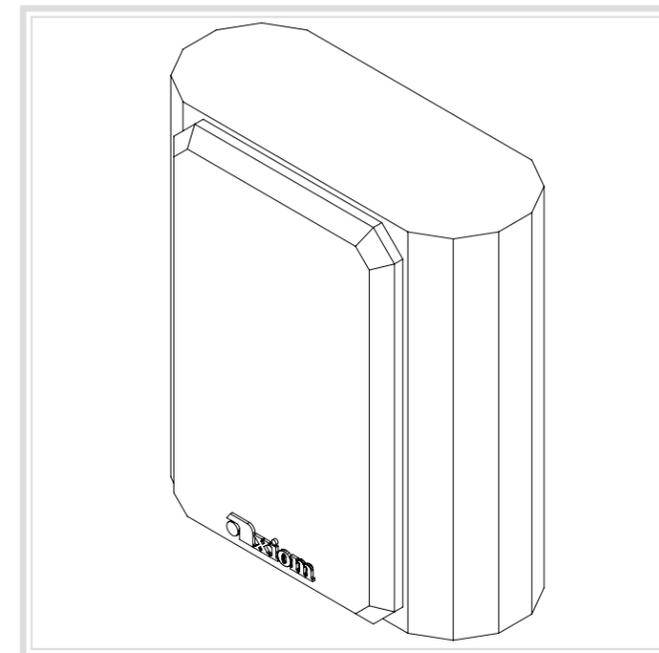


Product Links:

<http://axiomaudio.com/M0.html>

| Model: | M0 | Modèle: |
|---------------------------------|--------------------|------------------------------------|
| Max Rec. Amp Power: | 150 Watts | Puissance maximale admissible : |
| Min Amp Power: | 20 Watts | Puissance minimale : |
| Frequency Response +/- 3dB: | 160 Hz – 20 kHz | Réponse en freq. +/- 3dB : |
| Frequency Response + 3dB/- 9dB: | 120 Hz – 20 kHz | Réponse en freq. + 3dB/- 9dB : |
| Impedance: | 8 Ohms | Impédance : |
| SPL In Room 1w/1m: | 87 dB | Sensibilité en salle 1w/1m : |
| SPL Anechoic 1w/1m: | 83 dB | Sensibilité Anéchoïque 1w/1m : |
| X-Over: | 3 kHz | Filtre : |
| Tweeter: | Single 1" Titanium | Transducteur d'aigu : |
| Woofers: | Single 3" Aluminum | Transducteur de grave : |
| On-wall Dimensions HWD mm: | 165 x 155 x 59 | Dimensions en saillie HLP mm : |
| On-wall Dimensions HWD inches: | 6.5 x 6.1 x 2.32 | Dimensions en saillie HLP inches : |
| Weight kg each: | 1.34 kg | Poids en Kilo chacun : |
| Weight lbs each: | 2.95 lbs | Poids en lb chacun : |


Step 1 / Étape 1:

Remove bracket from speaker.

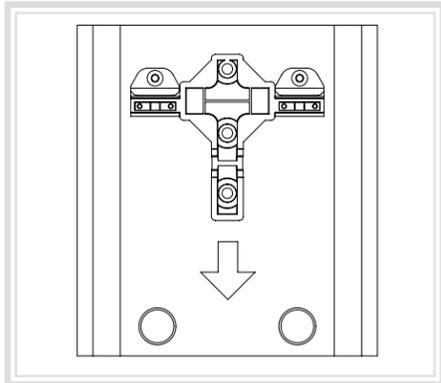


Step 2 / Étape 2:

Using a pencil, draw intersecting horizontal and vertical lines on wall at desired speaker location.

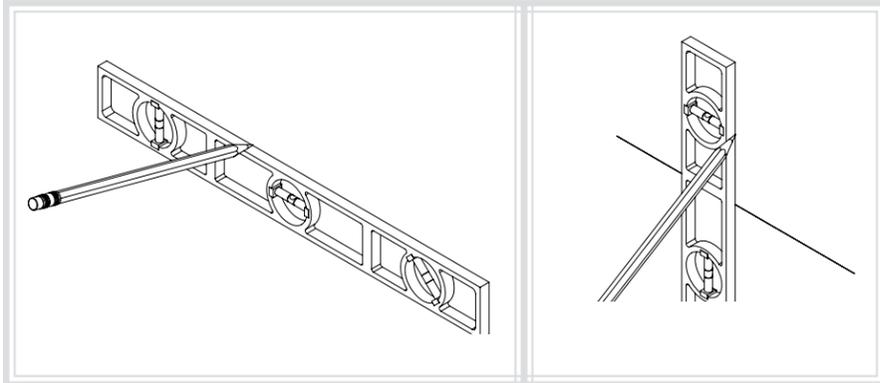


Step 3 / Étape 3:

Align edges of supplied template to lines on wall.

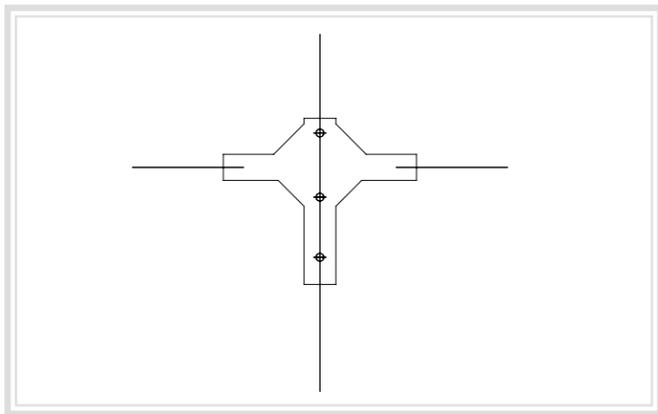


Step 4 / Étape 4:

Mark center of each hole through template onto wall.

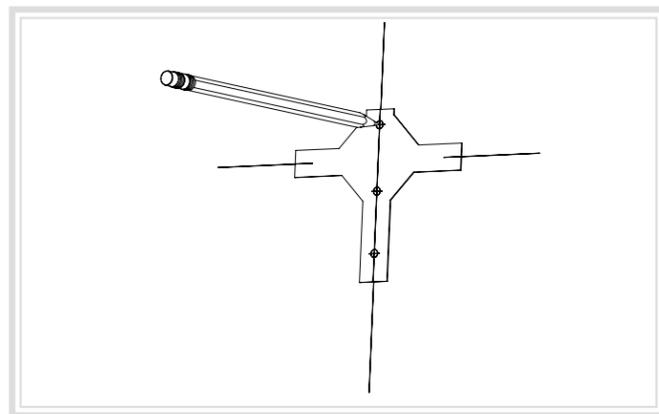


Step 5 / Étape 5:

Pre-screw holes.

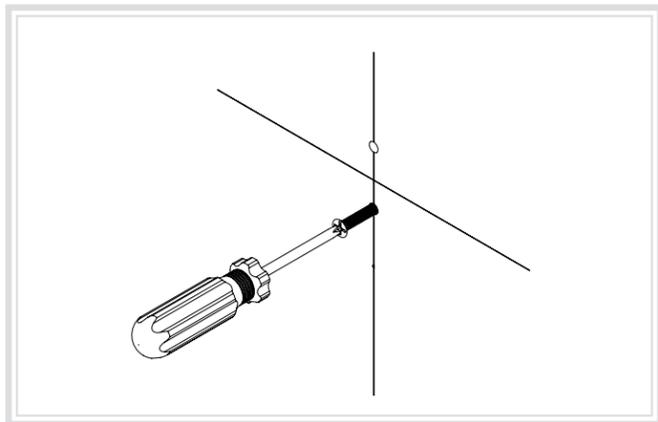



Step 6 / Étape 6:

Wash off pencil lines before installing bracket.

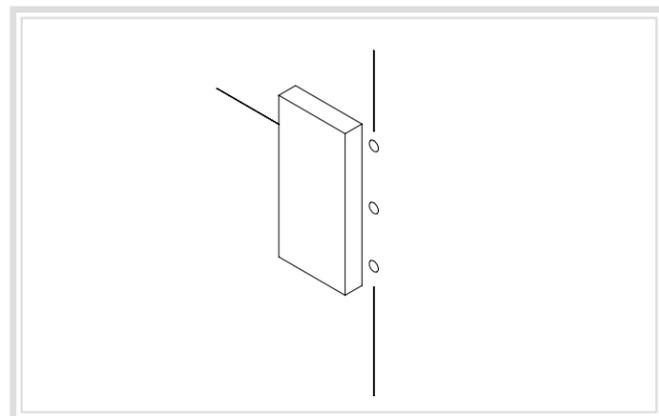


Step 7 / Étape 7:

Strip wire 1/4 inch.

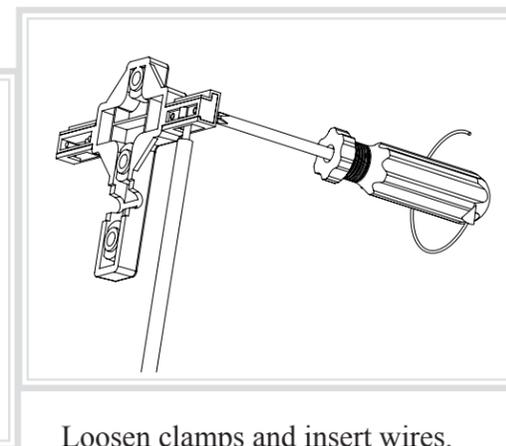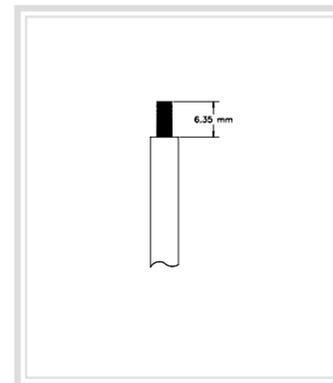


Loosen clamps and insert wires.

Tighten clamps.

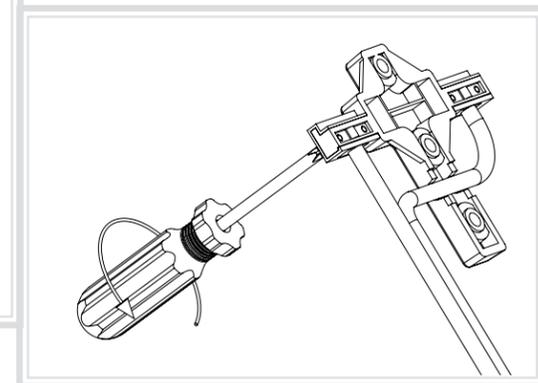


Step 8 / Étape 8:

Place bracket on the wall and align with holes.

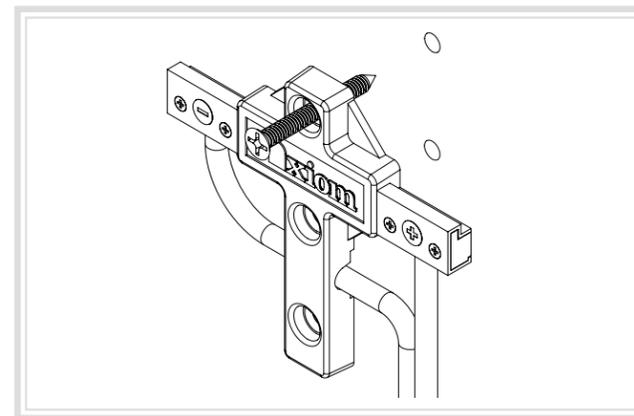


Step 9 / Étape 9:

Fasten bracket with supplied wood screws.

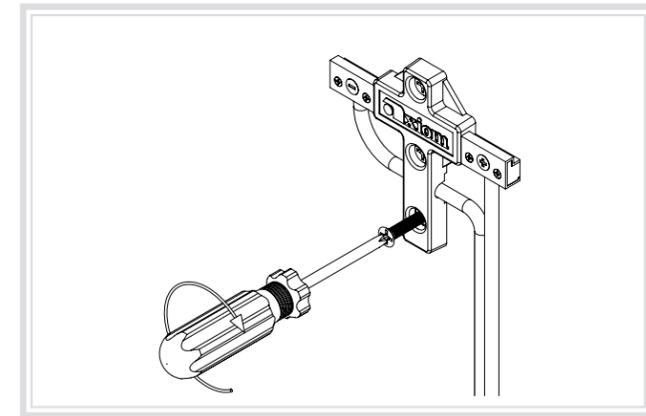

Step 10 / Étape 10:

Place speaker on bracket and gently push down.

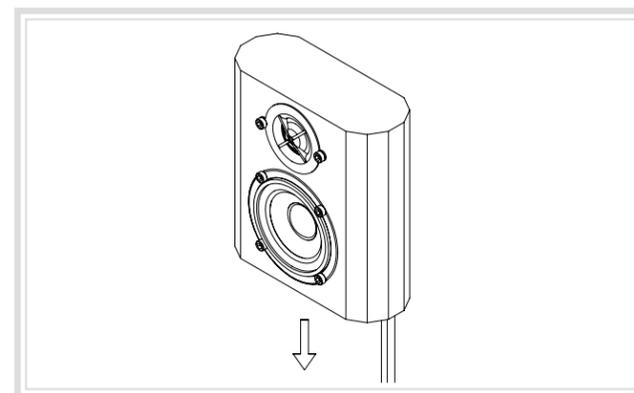

Step 11 / Étape 11:

Place grille on speaker.

